


# C4BD - SERIES

ASSEMBLY INSTRUCTIONS FOR  
LOCATING C4 BARN DOOR STOP-BRACKET

BUL10326

REV. A

PAGE 1 OF 1

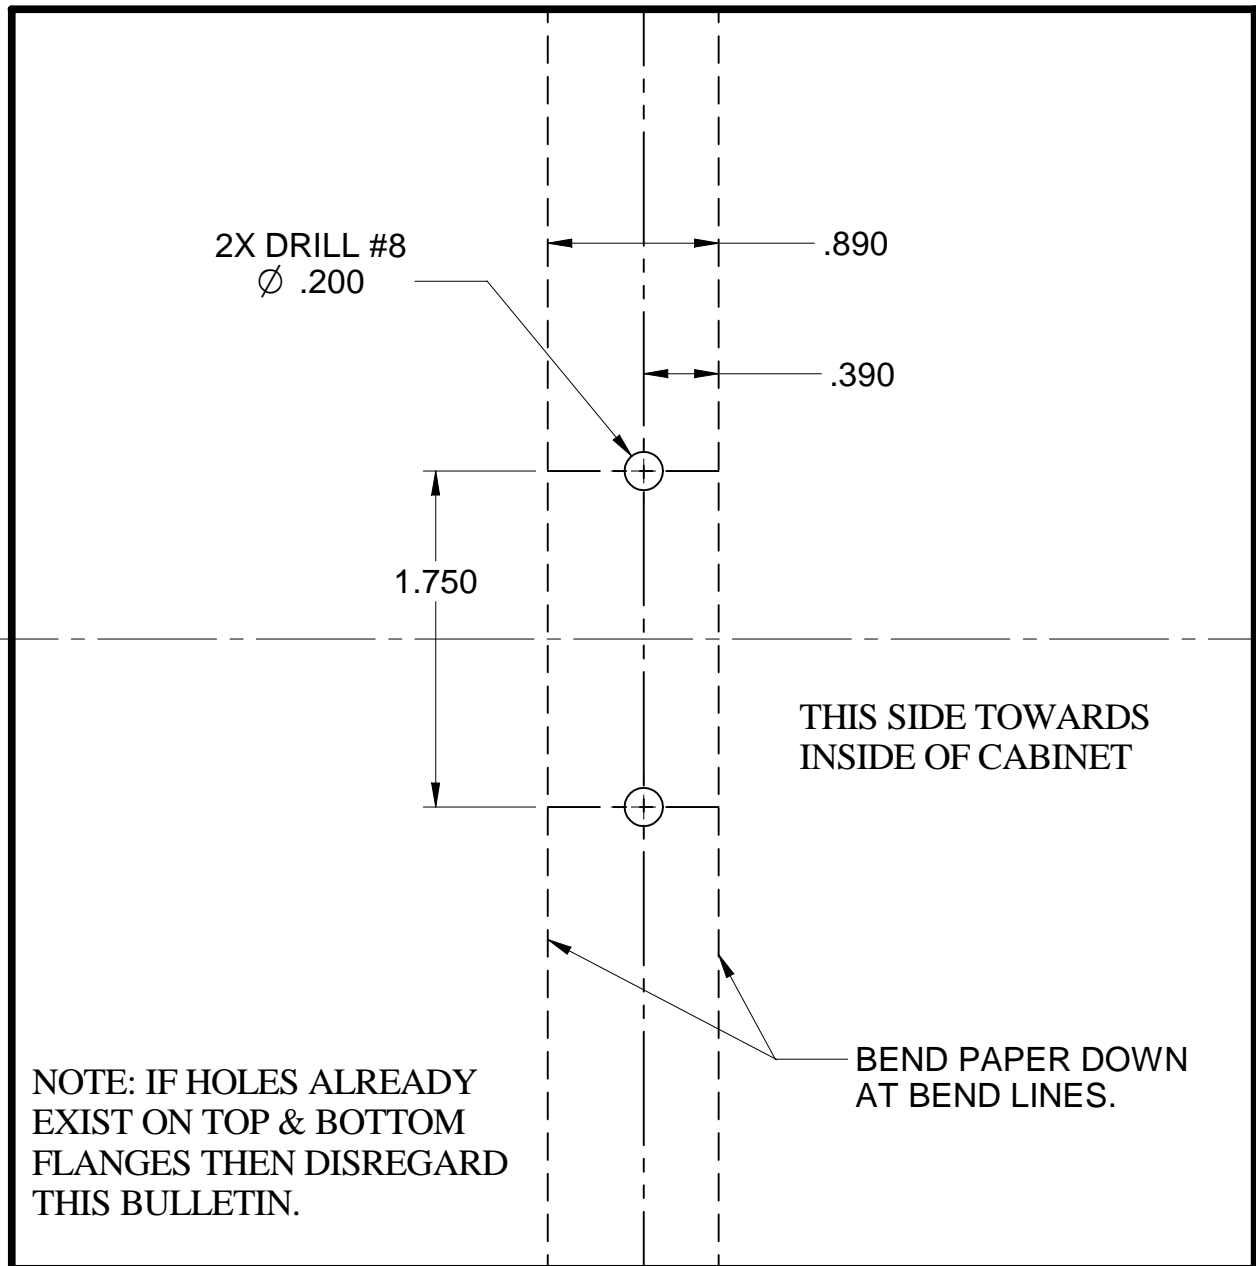

- 1) BEND PAPER AT BEND LINES.
- 2) PLACE TEMPLATE ON CENTER OF BOTTOM FLANGE.
- 3) USING A CENTER PUNCH MARK THE 2 POINTS TO BE DRILLED.
- 4) DRILL 2 HOLES AS INDICATED.
- 5) REPEAT ON TOP FLANGE.

TOOL BOX



Tape  
Measure




Centre  
Punch



Hammer



Drill



**HAMMOND  
MANUFACTURING™**  
ELECTRONICS GROUP

visit our website @ [www.hammondmfg.com](http://www.hammondmfg.com)