VPI – PANEL MOUNTING & WIRING

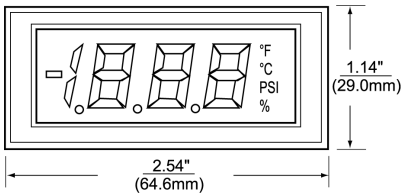

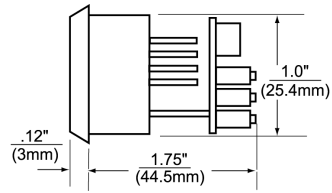

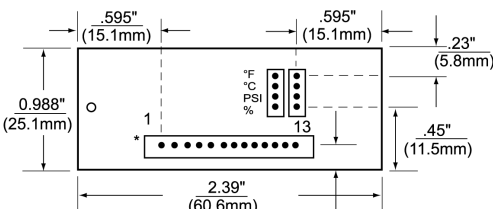

*NOTE:
(13) .025" square pins on .1" centers

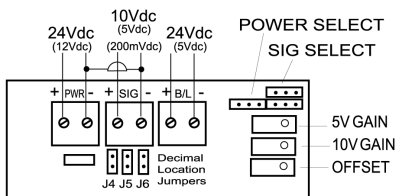

(upper)
WIRING

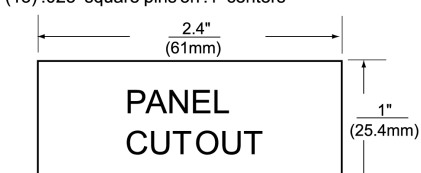

Decimal Point Selection

1. Locate jumpers J4 through J6 in the middle of the circuit board unit.
2. Jumper the appropriate decimal location as follows:

J4 - 000.0
J5 - 00.00
J6 - 0.000
None - 0000