


Module Front

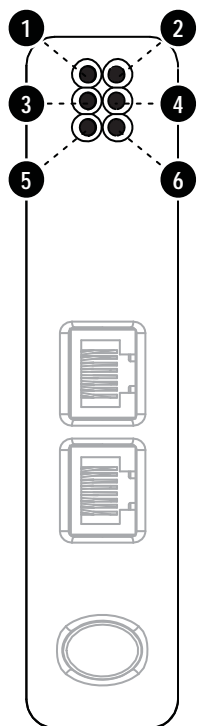

LED Indicators

LED	Indication	Description
1 (Module Status)	Off Green Flashing Green Flashing Red Red Flashing Green/Red	No power Controlled by a scanner in run state Not configured, or scanner in idle state Minor fault (recoverable) Major fault (unrecoverable) Self-test in progress
2 (Network Status)	Off Green Flashing Green Red Flashing Red Flashing Green/Red	No IP address, or no power Online, one or more EtherNet/IP connections established Online, no connections established Duplicate IP address detected. Fatal error. One or more connections timed out Self-test in progress
3 (Link)	Off Green	No link Connected to an Ethernet network
4 (Activity)	Off Flashing Green	No Ethernet activity Activity, receiving/transmitting Ethernet packets
5 (Subnet Status)	Flashing green Green Red	Running, but one or more transaction errors Running Transaction error/timeout or subnet stopped
6 (Device Status)	Off Alternating red/green Green Flashing green Red Flashing red	Power off Invalid or missing configuration Initializing Running Bootloader mode Note the flash sequence pattern and contact support

Accessories Checklist

The following items are required for installation:


- Subnetwork connector
- Ethernet cable and connector (not included)

Installation and Startup Summary

- Mount the EN2SE-R linking device on the DIN-rail.
- Connect the linking device to the EtherNet/IP network.
- Connect the device to the serial subnetwork.
- Connect the power cable and apply power.
- Assign an IP address to the device using BOOTP-DHCP Server.
- Start the Studio 5000 software.
- Search in the catalogue for the HMS-EN2SE-R.
- Add the device to the Ethernet network in the I/O configuration.
- In the general tab, assign a name and the previously chosen IP address to the device.
- Configure the device using the configuration manager and download the configuration to the device.
- Set up the EtherNet/IP communication according to the device configuration.

Bottom View

PC Connector:
Not used

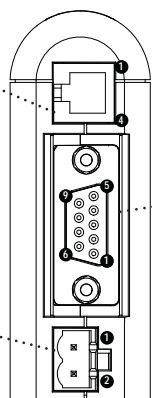


Power:
1. +24 V DC
2. GND

Subnetwork Connector

Pin no.	Description
1	+5V OUT
2	RS232 Rx
3	RS232 Tx
4	NC
5	Signal GND
6	RS422 Rx+
7	RS422 Rx-
8	RS485+ / RS422 Tx+
9	RS485- / RS422 Tx-

EtherNet/IP Connectors

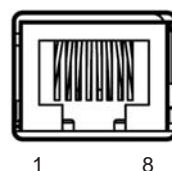

Pin no	Description
1	TD+
2	TD-
3	RD+
4	Termination
5	Termination
6	RD-
7	Termination
8	Termination

Further information and documents about this product can be found on <http://www.encompass.hms-networks.com>.

UL Certification



IND: CONT. EQ.
FOR HAZ LOC.
CL I, DIV 2
GP A,B,C,D
TEMP
CODE T4
E203225

Warnings:

- **WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.**
- **WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES.**
- **WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.**

Attention:

- **ATTENTION – RISQUE D’EXPLOSION – LE REMPLACEMENT DE TOUT COMPOSANTS INVALIDE LA CERTIFICATION CLASS I, DIVISION 2.**
- **ATTENTION – RISQUE D’EXPLOSION – EN ZONE EXPLOSIVE, VEUILLEZ COUPER L’ALIMENTATION ÉLECTRIQUE AVANT LE REMPLACEMENT OU LE RACCORDEMENT DES MODULES.**
- **ATTENTION – RISQUE D’EXPLOSION – NE PAS DÉCONNECTER L’ÉQUIPEMENT TANT QUE L’ALIMENTATION EST TOUJOURS PRÉSENTE OU QUE LE PRODUIT EST TOUJOURS EN ZONE EXPLOSIVE ACTIVE.**

Additional installation and operating instructions

- Max Ambient Temperature: 55°C (for Hazloc environments)
- Field wiring terminal markings (wire type (Cu only, 14-30 AWG)).
- Use 60/75 or 75°C copper (Cu) wire only.
- Terminal tightening torque must be 5-7 lb-in (0.5 - 0.8 Nm).
- Use in overvoltage category 1 pollution degree 2 environment.
- Installed in an enclosure considered representative of the intended use.
- Secondary circuit intended to be supplied from an isolating source and protected by overcurrent protective devices installed in the field sized per the following:

Control Circuit Wire Size		Maximum Protective Device Rating
AWG	(mm ²)	Amperes
22	(0.32)	3
20	(0.52)	5
18	(0.82)	7
16	(1.3)	10
14	(2.1)	20
12	(3.3)	25

ODVA Conformity



EtherNet/IP™ and ODVA™ are trademarks of ODVA, Inc.

EMC Compliance (CE)



This product is in accordance with the EMC directive 2014/30/EU through conformance with the following standards:

- **EN 61000-6-4**
Emission standard for industrial environment
EN55016-2-3, Class A
- **EN 61000-6-2**
Immunity for industrial environment
EN 61000-4-2
EN 61000-4-3
EN 61000-4-4
EN 61000-4-5
EN 61000-4-6

Further information and documents about this product can be found on <http://www.encompass.hms-networks.com>.